




## Technical info

# Brake pad wear indicators


When the brake pad lining reaches the minimum limit, the wear indicator activates a warning light in the instrument panel.



## System design

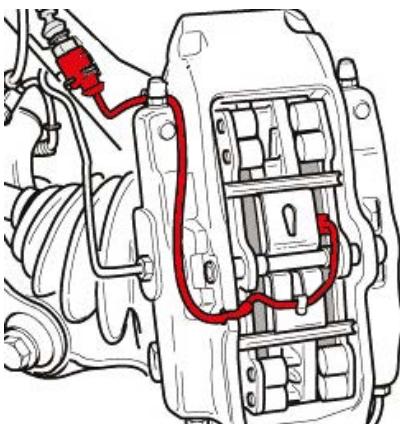

## Design

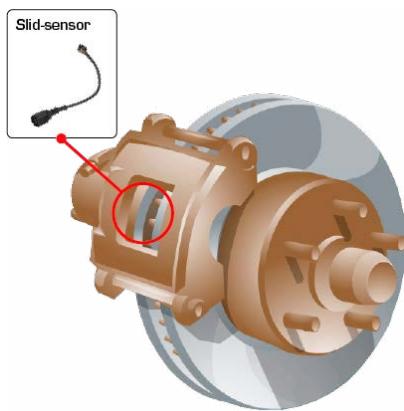


### 1 indicator per axle



### 2 indicators per axle



### 4 indicators per axle

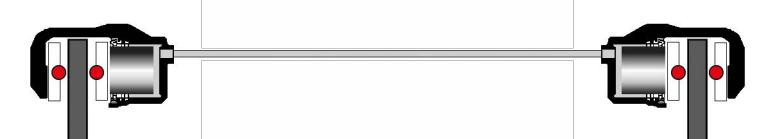

## Type

Clip-on

## Mounting

**REMEMBER!** All brake pad wear sensors of an axle should be replaced everytime the brake pads are replaced.

## Numbering system

8115 YY ZZZZZ: 8115=product group, YY=car make, ZZZZZ=consecutive numbering